



**KLT-E5MPF-OV5640-1B V2.0**

**5MP OmniVision OV5640-1B MIPI und DVP Parallelschnittstelle  
M12 Kameramodul mit festem Fokus**

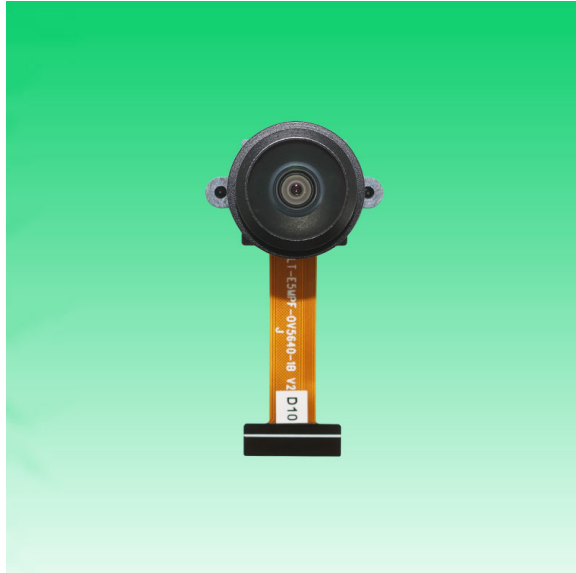

Vorderansicht

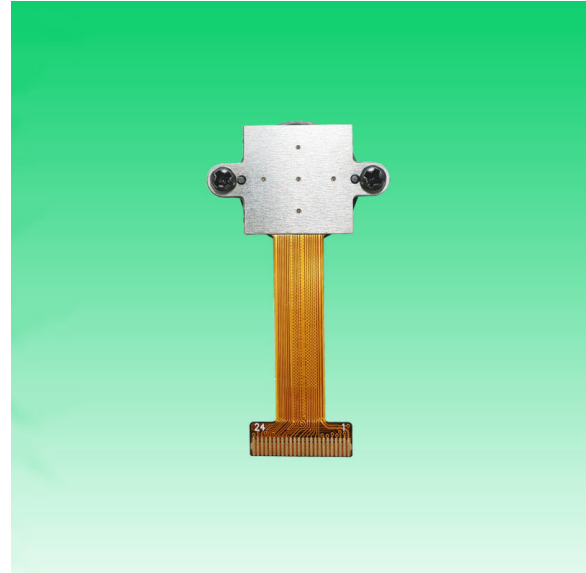

Rückansicht

**Spezifikationen**

|                                 |                                        |
|---------------------------------|----------------------------------------|
| <b>Kameramodul Nr.</b>          | <b>KLT-E5MPF-OV5640-1B V2.0</b>        |
| <b>Auflösung</b>                | 5MP                                    |
| <b>Bildsensor</b>               | OV5640-1B                              |
| <b>Sensorart</b>                | 1/4"                                   |
| <b>Pixel Größe</b>              | 1.4 um x 1.4 um                        |
| <b>EFL</b>                      | 0.90 mm                                |
| <b>F.NO</b>                     | 2.00                                   |
| <b>Pixel</b>                    | 2592 x 1944                            |
| <b>Betrachtungswinkel</b>       | 220.0°(DFOV) 187.0°(HFOV) 144.0°(VFOV) |
| <b>Linsenabmessungen</b>        | 13.00 x 13.00 x 13.56 mm               |
| <b>Modulgröße</b>               | 40.00 x 22.00 mm                       |
| <b>Modultyp</b>                 | Fester Fokus                           |
| <b>Schnittstelle</b>            | MIPI und DVP-Parallel                  |
| <b>Autofokus-VCM-Treiber-IC</b> | Eingebettet                            |
| <b>Objektivtyp</b>              | 650 nm IR-Schnitt                      |
| <b>Betriebstemperatur</b>       | -30°C to +70°C                         |
| <b>Gegenstecker</b>             | FH12-24S-0.5SH                         |

**KLT-E5MPF-OV5640-1B V2.0**

**5MP OmniVision OV5640-1B MIPI und DVP Parallelschnittstelle  
M12 Kameramodul mit festem Fokus**




Ansicht von oben



Seitenansicht



Untersicht



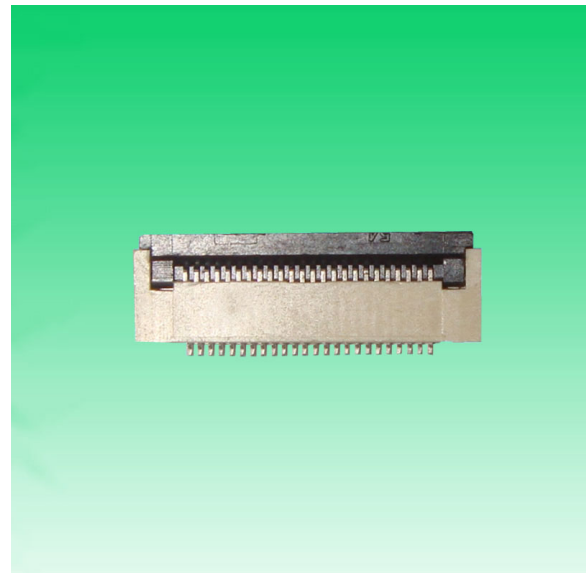


Gegenstecker

# RoHS

|    |             |
|----|-------------|
| 1  | AVDD(2.8V)  |
| 2  | DOVDD(2.8V) |
| 3  | DVDD(1.5V)  |
| 4  | PWDN        |
| 5  | FREX        |
| 6  | VSYN        |
| 7  | HREF        |
| 8  | D0          |
| 9  | D1          |
| 10 | D2          |
| 11 | D3          |
| 12 | DGND        |
| 13 | SIO_D       |
| 14 | SIO_C       |
| 15 | MCLK        |
| 16 | MDP1/D9     |
| 17 | MDN1/D8     |
| 18 | MCP/D7      |
| 19 | MCN/D6      |
| 20 | MDP0/D5     |
| 21 | MDN0/D4     |
| 22 | RESET       |
| 23 | PCLK        |
| 24 | AGND        |

| Version | Information            | Date      |
|---------|------------------------|-----------|
| V1.0    | First Version          | 3-8-2019  |
| V1.2    | Change lens and holder | 9-29-2021 |
| V2.0    | Update layout design   | 9-15-2023 |

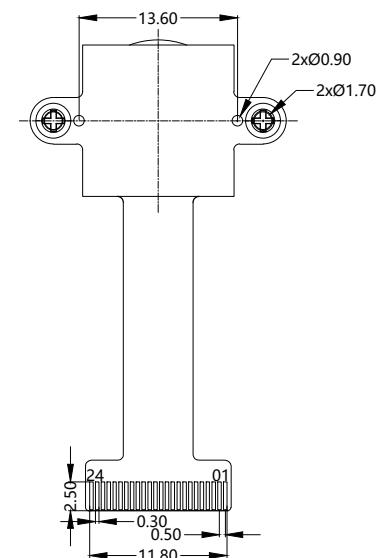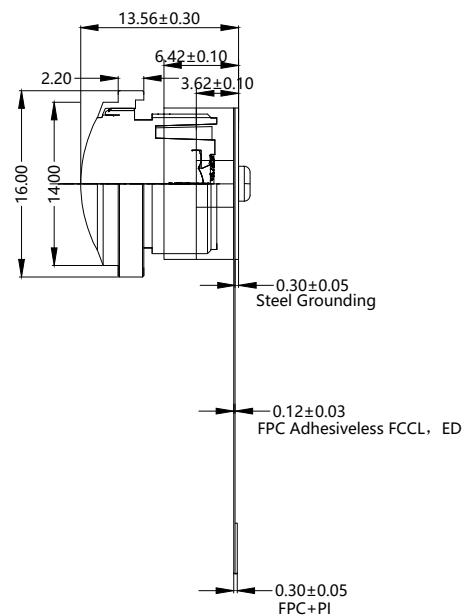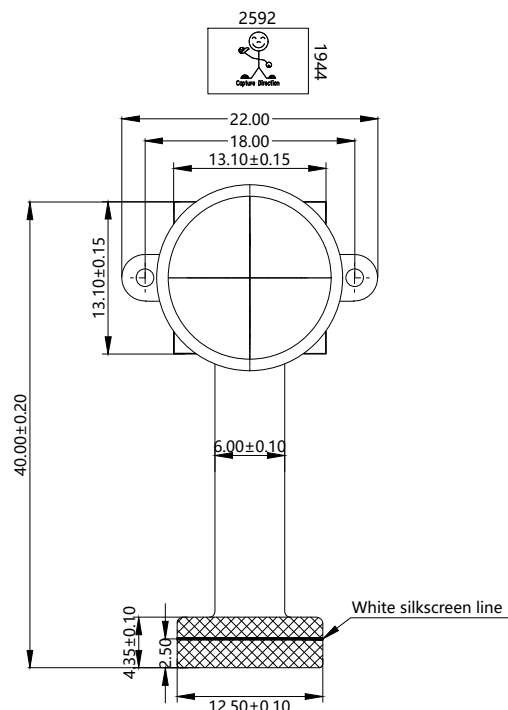

## Parameters:

### 1、Sensor specification:

Image Sensor: OV5640-1B

Pixel: 1.4um\*1.4um

Lens Type: 1/4

Important Voltage Description:

DVDD1.5V (external power supply);

### 2、Lens specification:

FOV: 220°(D);187°(H);144°(V)

F/NO.: 2.0

TV distortion: <-16%

Focal length: 0.9mm

Composition: 1G4P+IR FILTER

IR Cut Coating: 650nm±10nm@50%

## Kai Lap Technologies Group Ltd

Designed By

Kevin


Model Name:

KLT-E5MPF-OV5640-1B V2.0

Checked By

Jacky

Projection Type:



Unit:

mm

Scale:

1:1


Material:

Sheet:

1 of 1

Version:

1/0

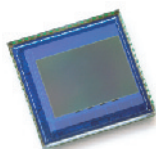

# OV5640 5-megapixel product brief



available in  
a lead-free  
package

## 1/4-inch, 5-Megapixel SOC Image Sensor Optimized for High-Volume Mobile Markets

The OV5640 delivers a complete 5-megapixel camera solution on a single chip, aimed at offering cost efficiencies that serve the high-volume autofocus (AF) camera phone market. The system-on-a-chip (SOC) sensor features OmniVision's 1.4 micron OmniBSI™ backside illumination architecture to deliver excellent pixel performance and best-in-class low-light sensitivity, while enabling ultra compact camera module designs of 8.5 mm x 8.5 mm with <6 mm z-height. The OV5640 provides the full functionality of a complete camera, including anti-shake technology, AF control, and MIPI while being easier to tune than two-chip solutions, making it an ideal choice in terms of cost, time-to-market and ease of platform integration.

The OV5640 enables 720p HD video at 60 frames per second (fps) and 1080p HD video at 30 fps with complete user control over formatting and output data transfer. The 720p/60 HD video is captured in full field of view (FOV) with 2 x 2 binning, which doubles the sensitivity and improves the signal-to-noise ratio (SNR). Additionally, a unique post-binning re-sampling filter function removes zigzag artifacts around slant edges and minimizes spatial artifacts to deliver even sharper, crisper

color images. To further improve camera performance and user experience, the OV5640 features an internal anti-shake engine for image stabilization, and it supports Scalado™ tagging for faster image preview and zoom.

The OV5640 offers a digital video port (DVP) parallel interface and a high-speed dual lane MIPI interface, supporting multiple output formats. An integrated JPEG compression engine simplifies data transfer for bandwidth-limited interfaces. The sensor's automatic image control functions include automatic exposure control (AEC), automatic white balance (AWB), automatic band filter (ABF), 50/60 Hz automatic luminance detection, and automatic black level calibration (ABLC). The OV5640 delivers programmable controls for frame rate, AEC/AGC 16-zone size/position/weight control, mirror and flip, cropping, windowing, and panning. It also offers color saturation, hue, gamma, sharpness (edge enhancement), lens correction, defective pixel canceling, and noise canceling to improve image quality.

Find out more at [www.ovt.com](http://www.ovt.com).

## applications

- cellular phones
- toys
- PC multimedia
- digital still cameras

## ordering information

- **OV05640-A71A-1B** (color, lead-free)  
71-pin CSP

## features



- 1.4  $\mu\text{m}$  x 1.4  $\mu\text{m}$  pixel with OmniBSI technology for high performance (high sensitivity, low crosstalk, low noise, improved quantum efficiency)
- optical size of 1/4"
- automatic image control functions: automatic exposure control (AEC), automatic white balance (AWB), automatic band filter (ABF), automatic 50/60 Hz luminance detection, and automatic black level calibration (ABLC)
- programmable controls for frame rate, AEC/AGC 16-zone size/position/weight control, mirror and flip, cropping, windowing, and panning
- image quality controls: color saturation, hue, gamma, sharpness (edge enhancement), lens correction, defective pixel canceling, and noise canceling
- support for output formats: RAW RGB, RGB565/555/444, CCIR656, YUV422/420, YCbCr422, and compression
- support for video or snapshot operations
- support for internal and external frame synchronization for frame exposure mode
- support for LED and flash strobe mode
- support for horizontal and vertical sub-sampling, binning
- support for minimizing artifacts on binned image
- support for data compression output
- support for anti-shake
- standard serial SCCB interface
- digital video port (DVP) parallel output interface and dual lane MIPI output interface
- embedded 1.5V regulator for core power
- programmable I/O drive capability, I/O tri-state configurability
- support for black sun cancellation
- support for images sizes: 5 megapixel, and any arbitrary size scaling down from 5 megapixel
- support for auto focus control (AFC) with embedded AF VCM driver
- embedded microcontroller
- suitable for module size of 8.5 x 8.5 x <6mm with both CSP and RW packaging

## key specifications (typical)

- **active array size:** 2592 x 1944
- **power supply:**
  - core: 1.425 ~ 1.675V (with embedded 1.5V regulator)
  - analog: 2.6 ~ 3.0V (2.8V typical)
  - I/O: 1.8V / 2.8V
- **power requirements:**
  - active: 140 mA
  - standby: 20  $\mu\text{A}$
- **temperature range:**
  - operating: -30°C to 70°C junction temperature (see [table 8-2](#))
  - stable image: 0°C to 50°C junction temperature (see [table 8-2](#))
- **output formats:** 8-/10-bit RGB RAW output
- **lens size:** 1/4"
- **lens chief ray angle:** 24° (see [figure 10-2](#))
- **input clock frequency:** 6~27 MHz
- **max S/N ratio:** 36 dB
- **dynamic range:** 68 dB @ 8x gain
- **maximum image transfer rate:**
  - QSXGA (2592x1944): 15 fps
  - 1080p: 30 fps
  - 1280x960: 45 fps
  - 720p: 60 fps
  - VGA (640x480): 90 fps
- **sensitivity:** 600 mV/Lux-sec
- **shutter:** rolling shutter / frame exposure
- **maximum exposure interval:** 1964 x  $t_{\text{ROW}}$
- **pixel size:** 1.4  $\mu\text{m}$  x 1.4  $\mu\text{m}$
- **dark current:** 8 mV/s @ 60°C junction temperature
- **image area:** 3673.6  $\mu\text{m}$  x 2738.4  $\mu\text{m}$
- **package dimensions:** 5985  $\mu\text{m}$  x 5835  $\mu\text{m}$

# 0.5mm and 1mm Pitch Connectors For FPC/FFC

## FH12 Series

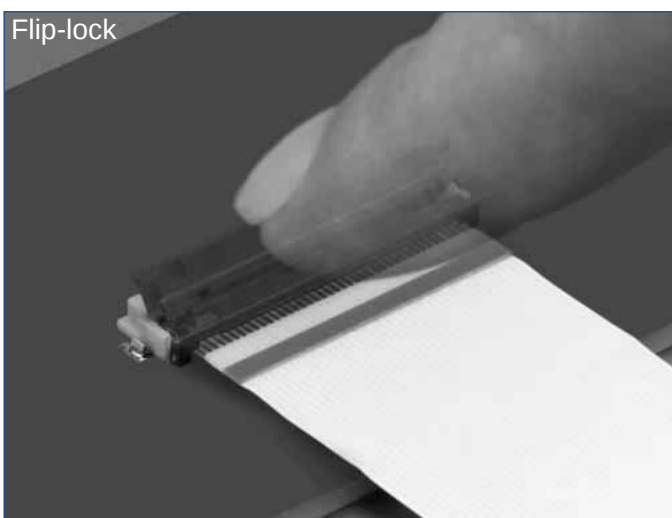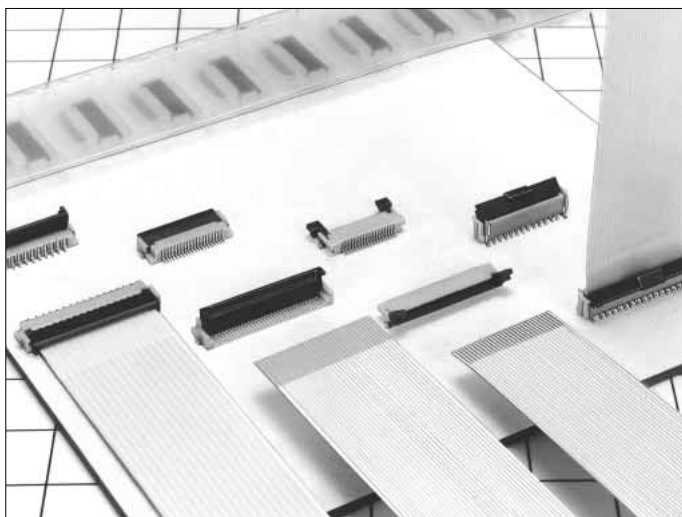

### ■ Features

#### 1. Ease of Use and Space Savings

Only one finger or 6.9N (Newtons) of force is required to lock Hirose's rotational actuator (flip-lock) as compared to using 2 fingers and 39.2N to close a FFC/FPC connector from our competition.

The Flip-Lock design also allows customers to place 2 or more connectors side by side as there is no need to waste additional board space for a side latch.

#### 2. Strengthened Flip-lock Actuator

The standard Flip-Lock requires only 2.0mm height above the board. A strengthened lock lever is available which only requires an additional 0.4mm.

#### 3. Supports Thin FPC (0.18mm)

Hirose does not require double-sided FPC to have any additional strengthening plate or stiffener and can therefore support a thickness of as little as 0.18mm +/- 0.05.

#### 4. Hirose Ensures Reliability

Hirose's patented half tuning fork contacts maintain the required normal force without relying on the connector housing. With our competitor's conventional products the housing walls support the contact force, which does not provide for long-term reliability.

#### 5. Prevention of Solder Bridge


Excess solder cavity absorbs excessive solder and avoids solder bridging.

#### 6. Three different assembly types


FH12 is offered in Top & Bottom Contact and Vertical Mount and offered in both a 0.5mm contact pitch as well as a 1.0mm contact pitch (bottom contact only).

### Rotating One-touch Mechanism


①

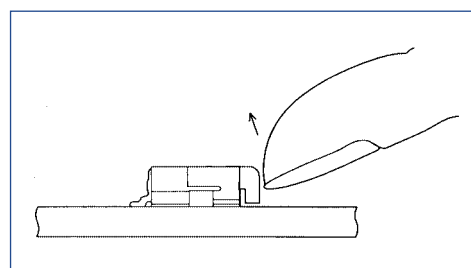

②

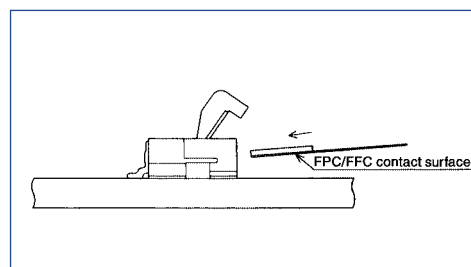

③

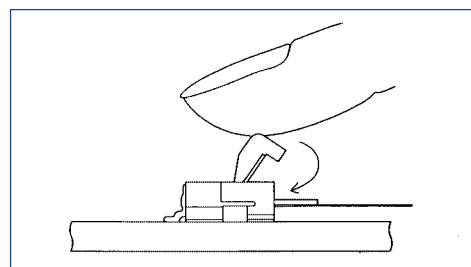

### ■ Applications

Notebook computers, printers, PDAs, digital cameras and other compact devices for interconnecting the main circuit board with the LCD, HDD or other device.

## Product Specifications

|        |                                                           |                                                                                                                            |                                                                                                                        |
|--------|-----------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| Rating | Current rating: 0.5A DC(Note 1)<br>Voltage rating: 50V AC | Operating Temperature Range: -40 to +70°C (Note 2)<br>Operating Humidity Range: Relative humidity, 90% max.<br>(Not dewed) | Storage Temperature Range: -10 to +50°C (Note 3)<br>Storage Humidity Range: Relative humidity, 90% max.<br>(Not dewed) |
|--------|-----------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|

|                |                        |                                  |
|----------------|------------------------|----------------------------------|
| Applicable FPC | t=0.3±0.05 Gold plated | t=0.18 ± 0.05 for FH12F-*S-0.5SH |
|----------------|------------------------|----------------------------------|

| Item                                 | Specification                                                                                                                   | Conditions                                                                                                         |
|--------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| 1. Insulation resistance             | 500M ohms minimum                                                                                                               | 100V DC                                                                                                            |
| 2. Withstanding voltage              | No flashover or insulation breakdown.                                                                                           | 150V AC/1 minute                                                                                                   |
| 3. Contact resistance                | 50m ohms maximum                                                                                                                | 1mA                                                                                                                |
| 4. Durability (Insertion/withdrawal) | Contact resistance: 50m ohms maximum<br>No damage, cracks, or parts dislocation.                                                | 20 cycles                                                                                                          |
| 5. Vibration                         | No electrical discontinuity of 1μs or more<br>Contact resistance: 50m ohms maximum.<br>No damage, cracks, or parts dislocation. | Frequency: 10 to 55 Hz, single amplitude of 0.75 mm,<br>2 hours in each of the 3 directions.                       |
| 6. Shock                             | No electrical discontinuity of 1μs or more<br>Contact resistance: 50m ohms maximum.<br>No damage, cracks, or parts dislocation. | Acceleration of 490 m/s <sup>2</sup> , 11 ms duration,<br>sine half-wave waveform, 3 cycles in each of the 3 axis. |
| 7. Humidity(Steady state)            | Contact resistance: 50m ohms maximum.<br>Insulation resistance: 50M ohms minimum.<br>No damage, cracks, or parts dislocation.   | 96 hours at 40°C and humidity of 90% to 95%                                                                        |
| 8. Temperature Cycle                 | Contact resistance: 50m ohms maximum.<br>Insulation resistance: 50M ohms minimum.<br>No damage, cracks, or parts dislocation.   | Temperature: -40°C → 15 to 35°C → 85°C → 15 to 35°C,<br>Time: 30 → 5 max. → 30 → 5 max.(minutes)<br>5 cycles       |
| 9. Resistance to Soldering heat      | No deformation of components affecting performance.                                                                             | Reflow: At the recommended temperature profile<br>Manual soldering: 350±5°C for 3 seconds                          |

Note 1: When passing the current through all of the contacts, use 70% of the current rating.

Note 2: Includes temperature rise caused by current flow.

Note 3: The term "storage" refers to products stored for long period of time prior to mounting and use. Operating Temperature Range and Humidity range covers nonconducting condition of installed connectors in storage, shipment or during transportation.

## Material

| Part           | Material                | Finish             | Remarks |
|----------------|-------------------------|--------------------|---------|
| Insulator      | Polyamide, LCP(60 pos.) | Color : Beige      | UL94V-0 |
| Actuator       | PPS                     | Color : Dark brown |         |
| Contact        | Phosphor bronze         | Gold plated        | _____   |
| Metal Fittings | Brass                   | Tin plated         |         |

## Ordering Information






**FH12**   **A** - **10** (**4**) - **S** **A** - **0.5** **SH** (**55**)

①   ②   ③   ④   ⑤   ⑥   ⑦   ⑧   ⑨


|                                                                                                                                            |                                                                                        |
|--------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| ① Series Name : FH12                                                                                                                       | ⑤ Contact alignment: Single                                                            |
| ② Blank : standard type<br>A : Top contact type<br>S : Type with strengthened flip-lock actuator<br>F : Type with 0.18mm FPC End Thickness | ⑥ Eccentric direction:<br>Blank : standard type<br>A : Eccentric type                  |
| ③ Standard type : Number of contacts<br>Eccentric type : Number of contacts in 0.5mm housing                                               | ⑦ Contacts Pitch : 0.5mm, 1mm                                                          |
| ④ Standard type : Blank<br>Eccentric type : Number of contacts                                                                             | ⑧ Contact type<br>SH : SMT horizontal mounting type<br>SV : SMT vertical mounting type |
|                                                                                                                                            | ⑨ Plating specification<br>(55) : Gold plated                                          |

## FH12 Series 0.5mm and 1mm Pitch Connectors For FPC/FPC


### Series Configuration
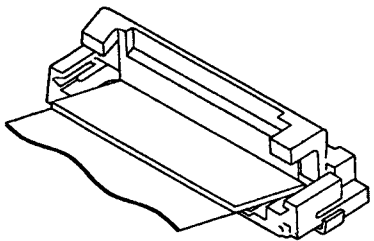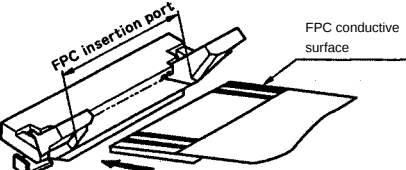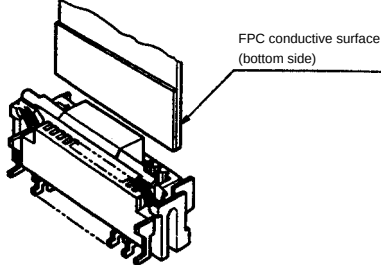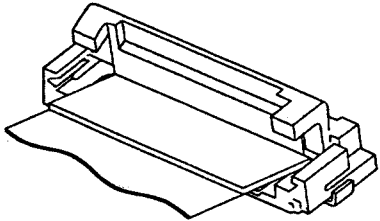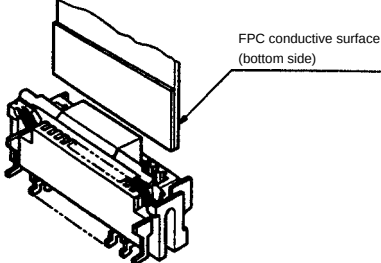
| Pitch | Bottom Contact Type                                                                                                                                                                                                                                                                                                                       | Top Contact Type                                                                                                                                     | Vertical mounting Type                                                                                                                                                           |
|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0.5mm |  <p><b>FH12- ** S-0.5SH</b> <b>P.12</b></p> <p>Number of contacts 6, 8, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 22, 24, 25, 26, 28, 30, 32, 33, 34, 35, 36, 40, 45, 50, 53</p>                                                                       |                                                                    |                                                                                               |
|       | Type with Strengthened Lock Lever                                                                                                                                                                                                                                                                                                         |                                                                                                                                                      |                                                                                                                                                                                  |
|       | <p><b>FH12S- ** S-0.5SH</b> <b>P.13</b></p> <p>Number of contacts 30, 40, 45, 50, 53</p>                                                                                                                                                                                                                                                  |                                                                                                                                                      |                                                                                                                                                                                  |
|       | Type with 0.18mm FPC End Thickness                                                                                                                                                                                                                                                                                                        |                                                                                                                                                      |                                                                                                                                                                                  |
|       | <p><b>FH12F- ** S-0.5SH</b> <b>P.14</b></p> <p>Number of contacts 6, 8, 10, 12, 13, 14, 15, 16, 18, 20, 22, 24, 25, 26, 28, 30, 32, 34, 36, 40</p>                                                                                                                                                                                        | <p><b>FH12A- ** S-0.5SH</b> <b>P.15</b></p> <p>Number of contacts 10, 12, 15, 16, 18, 20, 22, 24, 26, 28, 29, 30, 32, 33, 34, 36, 40, 42, 45, 50</p> | <p><b>FH12- ** S-0.5SV</b> <b>P.16</b></p> <p>Number of contacts 10, 12, 13, 15, 16, 17, 18, 20, 22, 24, 26, 30, 32, 33, 34, 36, 40, 45, 49, 50, 60</p>                          |
| 1mm   |  <p>Standard <b>FH12- ** S-1SH</b> <b>P.18</b></p> <p>Eccentric <b>FH12- ** (**) SA-1SH</b></p> <p>Standard</p> <p>Number of contacts 5, 6, 7, 8, 9, 11, 12, 16, 17, 22, 26</p> <p>Eccentric</p> <p>Number of contacts 4, 6, 8, 10, 11, 14, 19, 24</p> |                                                                                                                                                      |  <p><b>FH12- ** S-1SV</b> <b>P.19</b></p> <p>Number of contacts 6, 7, 8, 16, 20, 22, 24</p> |

## 0.5mm Pitch Bottom Contact Type

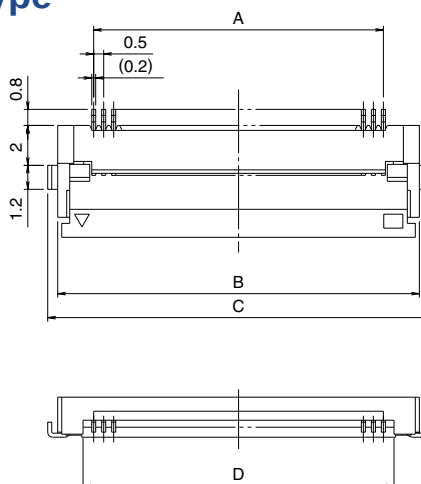

Mated Cross-sectional Diagram

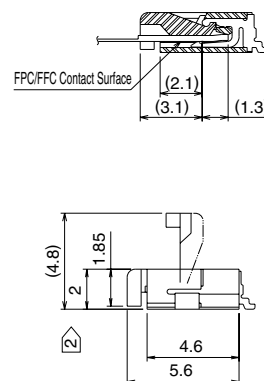

Unit:mm

| Part Number               | CL No.        | Number of Contacts | A    | B    | C    | D     | RoHS |
|---------------------------|---------------|--------------------|------|------|------|-------|------|
| FH12- 6S-0.5SH(55)        | 586-0582-5-55 | 6                  | 2.5  | 6.1  | 7.1  | 3.57  | YES  |
| FH12- 8S-0.5SH(55)        | 586-0744-5-55 | 8                  | 3.5  | 7.1  | 8.1  | 4.57  |      |
| FH12-10S-0.5SH(55)        | 586-0522-3-55 | 10                 | 4.5  | 8.1  | 9.1  | 5.57  |      |
| FH12-11S-0.5SH(55)        | 586-0600-5-55 | 11                 | 5    | 8.6  | 9.6  | 6.07  |      |
| FH12-12S-0.5SH(55)        | 586-0704-0-55 | 12                 | 5.5  | 9.1  | 10.1 | 6.57  |      |
| FH12-13S-0.5SH(55)        | 586-0549-0-55 | 13                 | 6    | 9.6  | 10.6 | 7.07  |      |
| FH12-14S-0.5SH(55)        | 586-0533-0-55 | 14                 | 6.5  | 10.1 | 11.1 | 7.57  |      |
| FH12-15S-0.5SH(55)        | 586-0523-6-55 | 15                 | 7    | 10.6 | 11.6 | 8.07  |      |
| FH12-16S-0.5SH(55)        | 586-0531-4-55 | 16                 | 7.5  | 11.1 | 12.1 | 8.57  |      |
| FH12-17S-0.5SH(55)        | 586-0606-1-55 | 17                 | 8    | 11.6 | 12.6 | 9.07  |      |
| FH12-18S-0.5SH(55)        | 586-0530-1-55 | 18                 | 8.5  | 12.1 | 13.1 | 9.57  |      |
| FH12-19S-0.5SH(55)        | 586-0534-2-55 | 19                 | 9    | 12.6 | 13.6 | 10.07 |      |
| FH12-20S-0.5SH(55)        | 586-0524-9-55 | 20                 | 9.5  | 13.1 | 14.1 | 10.57 |      |
| FH12-22S-0.5SH(55)        | 586-0532-7-55 | 22                 | 10.5 | 14.1 | 15.1 | 11.57 |      |
| FH12-24S-0.5SH(55)        | 586-0521-0-55 | 24                 | 11.5 | 15.1 | 16.1 | 12.57 |      |
| FH12-25S-0.5SH(55)        | 586-0692-3-55 | 25                 | 12   | 15.6 | 16.6 | 13.07 |      |
| FH12-26S-0.5SH(55)        | 586-0576-2-55 | 26                 | 12.5 | 16.1 | 17.1 | 13.57 |      |
| FH12-28S-0.5SH(55)        | 586-0612-4-55 | 28                 | 13.5 | 17.1 | 18.1 | 14.57 |      |
| Note ② FH12-30S-0.5SH(55) | 586-0525-1-55 | 30                 | 14.5 | 18.1 | 19.1 | 15.57 |      |
| FH12-32S-0.5SH(55)        | 586-0681-7-55 | 32                 | 15.5 | 19.1 | 20.1 | 16.57 |      |
| FH12-33S-0.5SH(55)        | 586-0520-8-55 | 33                 | 16   | 19.6 | 20.6 | 17.07 |      |
| FH12-34S-0.5SH(55)        | 586-0617-8-55 | 34                 | 16.5 | 20.1 | 21.1 | 17.57 |      |
| FH12-35S-0.5SH(55)        | 586-0740-4-55 | 35                 | 17.0 | 20.6 | 21.6 | 18.07 |      |
| FH12-36S-0.5SH(55)        | 586-0526-4-55 | 36                 | 17.5 | 21.1 | 22.1 | 18.57 |      |
| Note ② FH12-40S-0.5SH(55) | 586-0527-7-55 | 40                 | 19.5 | 23.1 | 24.1 | 20.57 |      |
| Note ② FH12-45S-0.5SH(55) | 586-0528-0-55 | 45                 | 22   | 25.6 | 26.6 | 23.07 |      |
| Note ② FH12-50S-0.5SH(55) | 586-0529-2-55 | 50                 | 24.5 | 28.1 | 29.1 | 25.57 |      |
| Note ② FH12-53S-0.5SH(55) | 586-0595-7-55 | 53                 | 26   | 29.6 | 30.6 | 27.07 |      |

Note 1 : Embossed tape reel packaging (2,000 pieces/reel).  
 Order by number of reels.

Note ② : If there is no problem with the connector height, we recommend the type with the strengthened Flip-lock actuator (FH12S-\*S-0.5SH).  
 Standard type connector height: 2 mm  
 Connector height of type with strengthened Flip-lock actuator: 2.4 mm



Autopilot




Live-Streaming



Videokonferenz



Biometrische Eye-Tracker-Erkennung

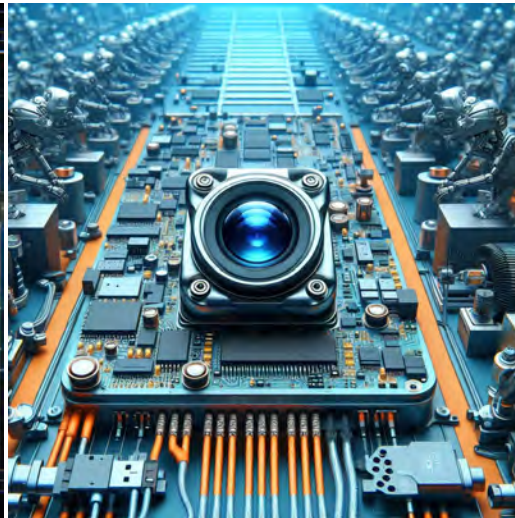

Maschinelles Sehen



Agrarmonitor



Nachtsichtsicherheit



Drohnen- und Sport-Adleraugen



Interaktive Haustierkamera

Kameraanwendungen

*your BEST camera module partner*



## IMAGING DEVICES



## Referenztafel für die Pinbelegungsdefinition des Kameramoduls

| OmniVision Sony Himax Samsung On-Semi Aptina Himax GalaxyCore PixArt Bildsensoren |                                                          |
|-----------------------------------------------------------------------------------|----------------------------------------------------------|
| Pin Signal                                                                        | Beschreibung                                             |
| DGND GND                                                                          | Masse für digitale Schaltung                             |
| AGND                                                                              | Masse für analoge Schaltung                              |
| PCLK DCK                                                                          | DVP-PCLK-Ausgang                                         |
| XCLR PWDN XSHUTDOWN STANDBY                                                       | Abschalten aktiv hoch mit internem Pulldown-Widerstand   |
| MCLK XVCLK XCLK INCK                                                              | Systemeingangsuhr                                        |
| RESET RST                                                                         | Aktiv Low mit internem Pull-up-Widerstand zurücksetzen   |
| NC NULL                                                                           | keine Verbindung                                         |
| SDA SIO_D SIOD                                                                    | SCCB-Daten                                               |
| SCL SIO_C SOIC                                                                    | SCCB-Eingangstakt                                        |
| VSYNCS XVS FSYNCS                                                                 | DVP-VSYNCS-Ausgang                                       |
| HREF XHS                                                                          | DVP-HREF-Ausgang                                         |
| DOVDD                                                                             | Strom für E/A-Schaltung                                  |
| AFVDD                                                                             | Strom für VCM-Schaltung                                  |
| AVDD                                                                              | Strom für analoge Schaltung                              |
| DVDD                                                                              | Strom für digitale Schaltung                             |
| STROBE FSTROBE                                                                    | Strobe-Ausgang                                           |
| FSIN                                                                              | Synchronisieren Sie das VSYNCS-Signal vom anderen Sensor |
| SID                                                                               | SCCB letzte Bit-ID-Eingabe                               |
| ILPWM                                                                             | mechanische Shutter-Ausgangsanzeige                      |
| FREX                                                                              | Rahmenbelichtung / mechanischer Verschluss               |
| GPIO                                                                              | Allzweckeingänge                                         |
| SLASEL                                                                            | I2C-Slave-Adresse auswählen                              |
| AFEN                                                                              | CEN-Chip aktivieren aktiv hoch auf VCM-Treiber-IC        |
| <b>MIPI Schnittstelle</b>                                                         |                                                          |
| MDN0 DN0 MD0N DATA_N DMO1N                                                        | MIPI 1st negative Ausgabe der Datenspur                  |
| MDP0 DP0 MD0P DATA_P DMO1P                                                        | MIPI 1st positiver Ausgang der Datenspur                 |
| MDN1 DN1 MD1N DATA2_N DMO2N                                                       | MIPI 2nd negative Ausgabe der Datenspur                  |
| MDP1 DP1 MD1P DATA2_P DMO2P                                                       | MIPI 2nd positiver Ausgang der Datenspur                 |
| MDN2 DN2 MD2N DATA3_N DMO3N                                                       | MIPI 3rd negative Ausgabe der Datenspur                  |
| MDP2 DP2 MD2P DATA3_P DMO3P                                                       | MIPI 3rd positiver Ausgang der Datenspur                 |
| MDN3 DN3 MD3N DATA4_N DMO4N                                                       | MIPI 4th negative Ausgabe der Datenspur                  |
| MDP3 DP3 MD3P DATA4_P DMO4P                                                       | MIPI 4th positiver Ausgang der Datenspur                 |
| MCN CLKN CLK_N DCKN                                                               | MIPI Uhr negativer Ausgang                               |
| MCP CLKP MCP CLK_P DCKN                                                           | MIPI Takt positiver Ausgang                              |
| <b>DVP Parallel Schnittstelle</b>                                                 |                                                          |
| D0 DO0 Y0                                                                         | DVP Datenausgabeport 0                                   |
| D1 DO1 Y1                                                                         | DVP Datenausgabeport 1                                   |
| D2 DO2 Y2                                                                         | DVP Datenausgabeport 2                                   |
| D3 DO3 Y3                                                                         | DVP Datenausgabeport 3                                   |
| D4 DO4 Y4                                                                         | DVP Datenausgabeport 4                                   |
| D5 DO5 Y5                                                                         | DVP Datenausgabeport 5                                   |
| D6 DO6 Y6                                                                         | DVP Datenausgabeport 6                                   |
| D7 DO7 Y7                                                                         | DVP Datenausgabeport 7                                   |
| D8 DO8 Y8                                                                         | DVP Datenausgabeport 8                                   |
| D9 DO9 Y9                                                                         | DVP Datenausgabeport 9                                   |
| D10 DO10 Y10                                                                      | DVP Datenausgabeport 10                                  |
| D11 DO11 Y11                                                                      | DVP Datenausgabeport 11                                  |

## Kamera-Zuverlässigkeitstest


| Reliability Inspection Item |                                       |                                                                     | Testmethode               | Akzeptanzkriterium        |
|-----------------------------|---------------------------------------|---------------------------------------------------------------------|---------------------------|---------------------------|
| Kategorie                   |                                       | Artikel                                                             |                           |                           |
| Umwelt                      | Lager Temperatur                      | Hoch 60°C 96 Std                                                    | Temperaturkammer          | Keine anormale Situation  |
|                             |                                       | Niedrig -20°C 96 Std                                                | Temperaturkammer          | Keine anormale Situation  |
|                             | Betriebs Temperatur                   | Hoch 60°C 24 Std                                                    | Temperaturkammer          | Keine anormale Situation  |
|                             |                                       | Niedrig -20°C 24 Std                                                | Temperaturkammer          | Keine anormale Situation  |
|                             | Feuchtigkeit                          | 60°C 80% 24 Std                                                     | Temperaturkammer          | Keine anormale Situation  |
|                             | Thermischer Schock                    | Hoch 60°C 0.5 Std<br>Niedrig -20°C 0.5 Std<br>Radfahren rein 24 Std | Temperaturkammer          | Keine anormale Situation  |
| Physisch                    | Falltest<br>(Im freien Fall)          | Ohne Verpackung 60cm                                                | 10 Mal auf Holzboden      | Elektrisch funktionsfähig |
|                             |                                       | Mit Paket 60cm                                                      | 10 Mal auf Holzboden      | Elektrisch funktionsfähig |
|                             | Vibrations Test                       | 50Hz X-Axis 2mm 30 Minuten                                          | Vibrationstisch           | Elektrisch funktionsfähig |
|                             |                                       | 50Hz Y-Axis 2mm 30 Minuten                                          | Vibrationstisch           | Elektrisch funktionsfähig |
|                             |                                       | 50Hz Z-Axis 2mm 30 Minuten                                          | Vibrationstisch           | Elektrisch funktionsfähig |
|                             | Zugfestigkeit des Kabels<br>Krafttest | Gewicht laden 4 kg<br>60 Sekunden<br>Radfahren rein 24 Std          | Zugprüfmaschine           | Elektrisch funktionsfähig |
| Elektrisch                  | ESD-Test                              | Kontaktaufnahme 2 KV                                                | ESD-Prüfmaschine          | Elektrisch funktionsfähig |
|                             |                                       | Luftentladung 4 KV                                                  | ESD-Prüfmaschine          | Elektrisch funktionsfähig |
|                             | Alterungstest                         | On/Off 30 Sekunden<br>Radfahren rein 24 Std                         | Stromschalter             | Elektrisch funktionsfähig |
|                             | USB-Anschluss                         | On/Off 250 Mal                                                      | Einstecken und ausstecken | Elektrisch funktionsfähig |



| Inspektionsgegenstand |              | Untersuchungsmethode     | Inspektionsstandard         |                                                                     |
|-----------------------|--------------|--------------------------|-----------------------------|---------------------------------------------------------------------|
| Kategorie             | Artikel      |                          |                             |                                                                     |
| Aussehen              | FPC oder PCB | Farbe                    | Das bloße Auge              | Größere Unterschiede sind nicht zulässig.                           |
|                       |              | Zerrissen/gehackt werden | Das bloße Auge              | Das Freilegen von Kupferrissen ist nicht zulässig.                  |
|                       |              | Markierung               | Das bloße Auge              | Klar, erkennbar (innerhalb von 30 cm Entfernung)                    |
|                       | Halterin     | Kratzer                  | Das bloße Auge              | Die Freilegung von Rissen im Inneren ist nicht zulässig             |
|                       |              | Lücke                    | Das bloße Auge              | Erfüllen Sie den Höhenstandard                                      |
|                       |              | Schraube                 | Das bloße Auge              | Stellen Sie sicher, dass Schrauben vorhanden sind (falls vorhanden) |
|                       |              | Schaden                  | Das bloße Auge              | Die Freilegung von Rissen im Inneren ist nicht zulässig             |
|                       | Linse        | Kratzen                  | Das bloße Auge              | Keine Auswirkung auf den Auflösungsstandard                         |
|                       |              | Kontamination            | Das bloße Auge              | Keine Auswirkung auf den Auflösungsstandard                         |
|                       |              | Ölfilm                   | Das bloße Auge              | Keine Auswirkung auf den Auflösungsstandard                         |
|                       |              | Abdeckband               | Das bloße Auge              | Kein Problem beim Aussehen.                                         |
|                       | Funktion     | Bild                     | Keine Kommunikation         | Testboard                                                           |
| Helles Pixel          |              |                          | Tafel                       | Im Image Center nicht erlaubt                                       |
| Dunkles Pixel         |              |                          | Weißer Tafel                | Im Image Center nicht erlaubt                                       |
| Verschwommen          |              |                          | Das bloße Auge              | Nicht erlaubt                                                       |
| Kein Bild             |              |                          | Das bloße Auge              | Nicht erlaubt                                                       |
| Vertikale Linie       |              |                          | Das bloße Auge              | Nicht erlaubt                                                       |
| Horizontale Linie     |              |                          | Das bloße Auge              | Nicht erlaubt                                                       |
| Kleines Leck          |              |                          | Das bloße Auge              | Nicht erlaubt                                                       |
| Blinkendes Bild       |              |                          | Das bloße Auge              | Nicht erlaubt                                                       |
| Prellung              |              |                          | Inspektionslehre            | Nicht erlaubt                                                       |
| Auflösung             |              |                          | Diagramm                    | Folgt dem Diagrammstandard für ausgehende Inspektionen              |
| Farbe                 |              |                          | Das bloße Auge              | Kein Problem                                                        |
| Lärm                  |              |                          | Das bloße Auge              | Nicht erlaubt                                                       |
| Ecke dunkel           |              |                          | Das bloße Auge              | Weniger als 100 x 100 Pixel                                         |
| Farbauflösung         |              |                          | Das bloße Auge              | Kein Problem                                                        |
| Abmessungen           |              |                          | Höhe                        | Das bloße Auge                                                      |
|                       | Breite       | Das bloße Auge           | Follows Approval Data Sheet |                                                                     |
|                       | Länge        | Das bloße Auge           | Follows Approval Data Sheet |                                                                     |
|                       | Gesamt       | Das bloße Auge           | Follows Approval Data Sheet |                                                                     |

## KLT-Paketlösungen

KLT Kameramodul

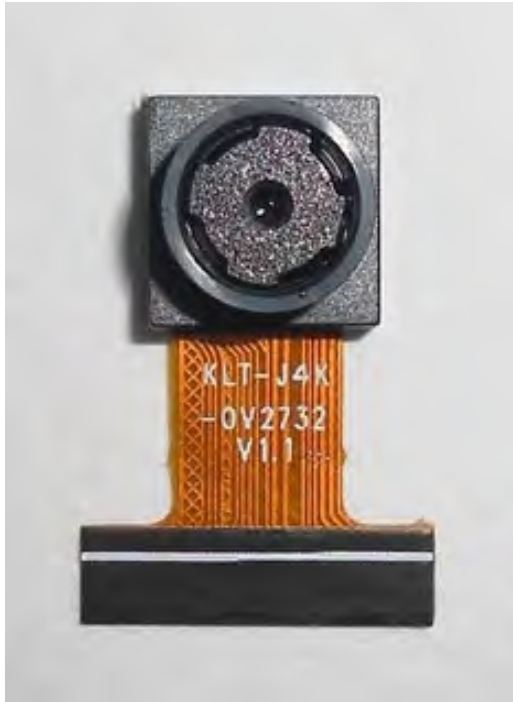

Komplett mit Linsenschutzfolie



Tablett mit Gitter und Raum




Legen Sie die Kameras auf das Tablett



## Paketlösung für Kameramodule

Volles Tablett mit Kameras

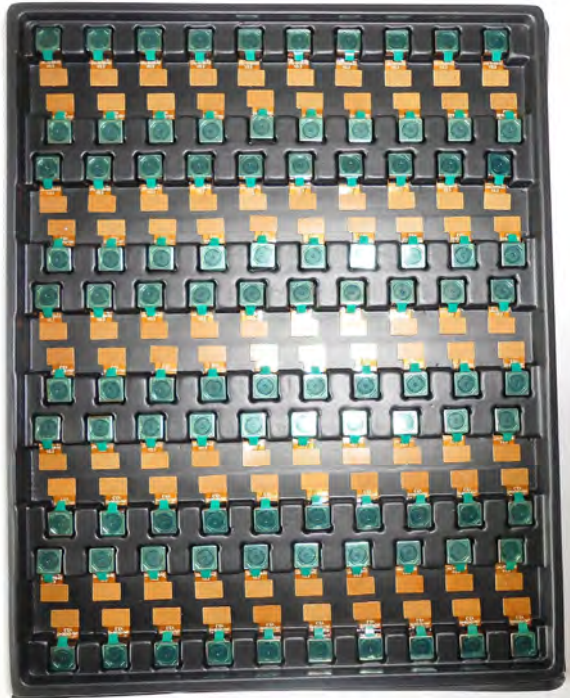


Abdeckschale mit Deckel



In Antistatikbeutel stecken



Staubsaugen Sie den antistatischen Beutel

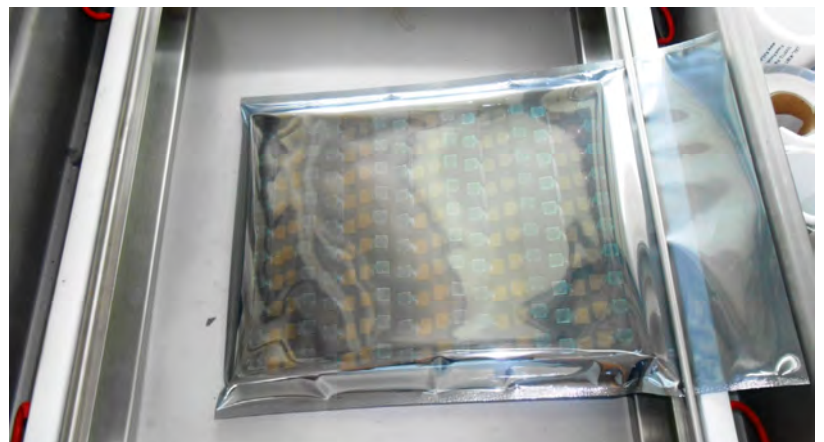

## Paketlösung für Kameramodule

Versiegelter Vakuumbbeutel mit Etiketten

1. Modell und Beschreibung 2. Menge 3. Versanddatum 4. Achtung



## Paketlösung für große Bestellungen

Schaumstoffplatten zwischen  
die Tablettts legen



Schaumstoffplatten sind etwas  
größer als Tablettts



Legen Sie Schaumstoffplatten und  
Tablettts in die Schachtel



Schaumstoffplatten sind eng anliegende Box



## Paketlösung für kleine Bestellungen

Legen Sie die Schaumstoffplatten und  
Tablets in die kleine Schachtel



Schaumstoffplatten passen gut in  
die kleine Box



Paket in kleiner Box für den Versand



Legen Sie kleine Kartons in größere Kartons



## Carbon Box Paketlösung

Verschließen Sie die Carbonbox

Beschriftete Schachtel mit Endverpackung



### Versandfertige Karbonbox

1. Lieferadresse und Telefonnummer
2. Box-Nr. und Versanddatum
3. Zerbrechliche Vorsicht



## Lösung für Musterbestellungspakete

Legen Sie die Probe in einen kleinen  
antistatischen Beutel



Stecken Sie die Anschlüsse in den kleinen  
antistatischen Beutel



### Musteretiketten auf dem kleinen Beutel

1. Kameramodul oder Anschlussmodell 2. Lieferdatum und Menge 3. Achtung



## Connectors Large Order Package Solution

Steckverbinder in einem Rad



Steckverbinder im Rad beschriftet



Das Rad passt perfekt in die Box



Steckerbox versandfertig




**Unternehmen Kai Lap Technologies (KLT)**

Kai Lap Technologies Group Limited. (KLT) wurde 2009 gegründet und ist ein technologiegetriebener Hersteller der nächsten Generation, der sich auf Forschung, Design und Produktion von Audio- und Videoprodukten spezialisiert hat. KLT verfügt über 20.000 Quadratfuß automatisierte Fabriken mit 100 Mitarbeitern und einem jährlichen Durchsatz von 30.000.000 Kameraeinheiten.

KLT bietet OEM-, ODM-Design, Auftragsfertigung und baut die Kameraprodukte. Sie können uns die Anforderungen auch mit einem Handentwurf übermitteln, unser Vertrieb und unsere Technik arbeiten zusammen, um Ihre Anforderungen zu erfüllen. Wir verstehen uns als Ihr langfristiger Partner bei der Entwicklung praktischer und innovativer Lösungen.

Unser Team deckt alles von der ersten Konzeptentwicklung bis zum Massenprodukt ab. KLT ist spezialisiert auf kundenspezifisches Kameradesign, Rohmaterial, Elektrotechnik, Firmware-/Softwareentwicklung, Produkttests und Verpackungsdesign. Unsere erfahrenen strategischen Versorgungssysteme bieten eine robuste und zuverlässige Fertigungskapazität für Aufträge unterschiedlicher Größe.

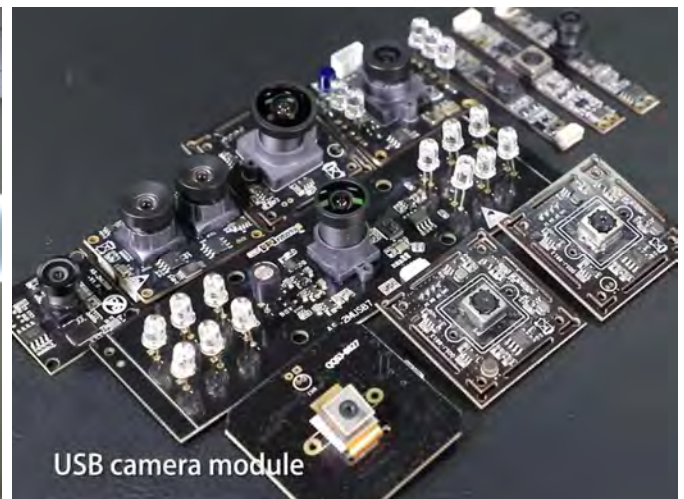**Eingeschränkte Garantie**

KLT gewährt die folgende eingeschränkte Garantie, wenn Sie das/die Produkt(e) direkt von der Firma KLT oder von der Website von KLT, [www.KaiLapTech.com](http://www.KaiLapTech.com), gekauft haben. Produkte, die von anderen Verkäufern oder Quellen gekauft wurden, fallen nicht unter diese beschränkte Garantie. KLT garantiert, dass das/die Produkt(e) bei normalem Gebrauch für einen Zeitraum von einem (1) Jahr ab dem Datum, an dem Sie das Produkt erhalten („Garantiezeitraum“), frei von Material- und Verarbeitungsfehlern sind.

Für alle Produkte, die während des Garantiezeitraums Material- oder Verarbeitungsfehler enthalten oder entwickeln, wird KLT nach eigenem Ermessen entweder: (i) die Produkte reparieren; (ii) das/die Produkt(e) durch ein neues oder generalüberholtes Produkt(e) ersetzen (Ersatzprodukt(e) sind von identischem Modell oder funktionell gleichwertig); oder (iii) Ihnen den Preis erstatten, den Sie für das/die Produkt(e) gezahlt haben.

Diese eingeschränkte Garantie von KLT ist ausschließlich auf Reparatur und/oder Ersatz zu den oben genannten Bedingungen beschränkt. KLT ist nicht zuverlässig oder verantwortlich für nachfolgende Ereignisse.



## KLT Stärke

### Leistungsstarke Fabrik



## Professioneller Service



## Versprochene Lieferung

